

Filter-Oiler-Regulator Instructions

Steps

1. Unscrew oil fill plug in the top of the lubricator and fill with Powercrafter oil until level is just below the Max Fill line, then replace plug.
2. Turn oil regulator knob clockwise until it will not turn any further. Then turn the knob counterclockwise 1/16th of a turn.
3. Fit the plastic tubing supplied with the tool onto the barb on the switch and attach the other end to the tool.
4. Place 3 drops of oil into the air inlet on the Powercrafter hand piece to lubricate the turbine until the oil from the lubricator can reach the hand piece.
5. Connect the air line from the compressor.
6. Lift the outside of the slotted knob up and turn clockwise to increase pressure to 45 PSI. Push knob down to lock pressure setting.
7. Flip the On/Off switch to the "ON" position to use the tool.
8. Even when using the lubricator, stop the tool every 4-5 hours of use, disconnect the air tubing from the hand piece, manually add 2-3 drops of oil to the inlet on the hand piece, reconnect the air tubing, cover the exhaust ports (2 round holes) on the hand piece with your thumb, turn the air on and force the oil out of the front of the tool into a paper towel or newspaper. This will clean and lubricate the front bearing for longer tool life.