


Turning a Combo Corkscrew

Supplies Needed

- 3/32" Drill Bit
- 1 1/4" x 1 1/4" x 1 1/2" Blank
- Glue (Thick CA or Epoxy)
- Sandpaper/Finish
- Drill or Drill Press
- Drive Center
- Revolving Center
- Eye and Ear Protection

Preparing and Turning the Combo Corkscrew

1. Select a blank approximately 1 1/4" x 1 1/4" x 1 1/2" thick and drill a 3/32" diameter hole 5/8" deep into the center of the end blank.
2. Mount the blank between centers with the hole centered on the revolving center point. Turn to the desired shape, leaving a small tenon on the top of the blank. The tenon will be removed after the blank is turned and finished.

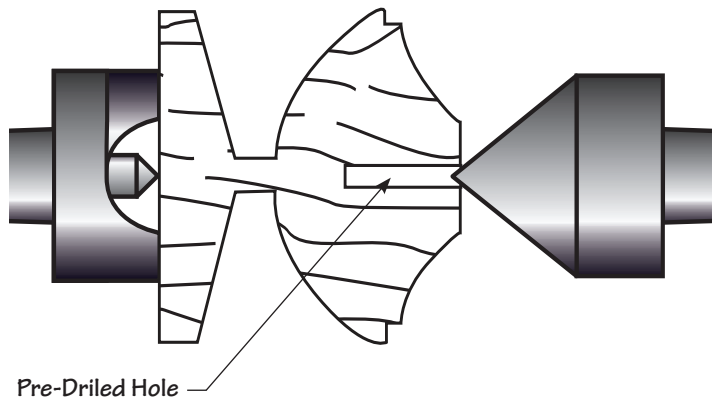

3. Remove the finished blank from the lathe and carefully cut off the tenon. Sand and finish the exposed area.
4. Screw the blank onto the threaded portion of the corkscrew until it fits snug against the bolster.

NOTE: Place a small amount of epoxy into the hole to secure the blank permanently.