

# Large Lamp Kit

## Supplies Needed

- 3/8" Drill Bit
- Blank
- Sandpaper/Finish
- Drill or Drill Press
- Eye and Ear Protection


## Steps

1. Mount wood blank on lathe, turn and finish to desired shape. Drill or turn a recess in the base of the turning.
2. Drill a 3/8" hole completely through the lamp base and another 3/8 horizontal hole near the bottom of the lamp base until it intersects the recess in the base. (see drawing)
3. Cut rod 4" to 5" long, this will allow 1 1/2" to 2" to be inserted into the lamp base then thread the smaller knurled nut about 3/8" onto threaded end of rod. Slide brass tube over end of rod onto knurled nut. Then slide harp ring onto rod on top

of brass tube. Take larger knurled nut and thread onto rod, tighten against harp ring and screw socket base onto threads. Select the trim ring you like and slide onto the bottom of the rod. (see drawing)

4. Twist rod into lamp base until trim ring touches base . If the rod is too loose you may want to apply some glue to the rod then insert it into the base.
5. Feed the cord through the 3/8" holes in the base until it comes out the top.
6. Attach the wire ends to the screws on the socket (see figure 1)
7. Pull excess wire back through the hole and snap socket into socket base. Snap the socket cover to the socket base.

**Note:** There will be extra pieces supplied with the kit that are not used in the assembly of the lamp.

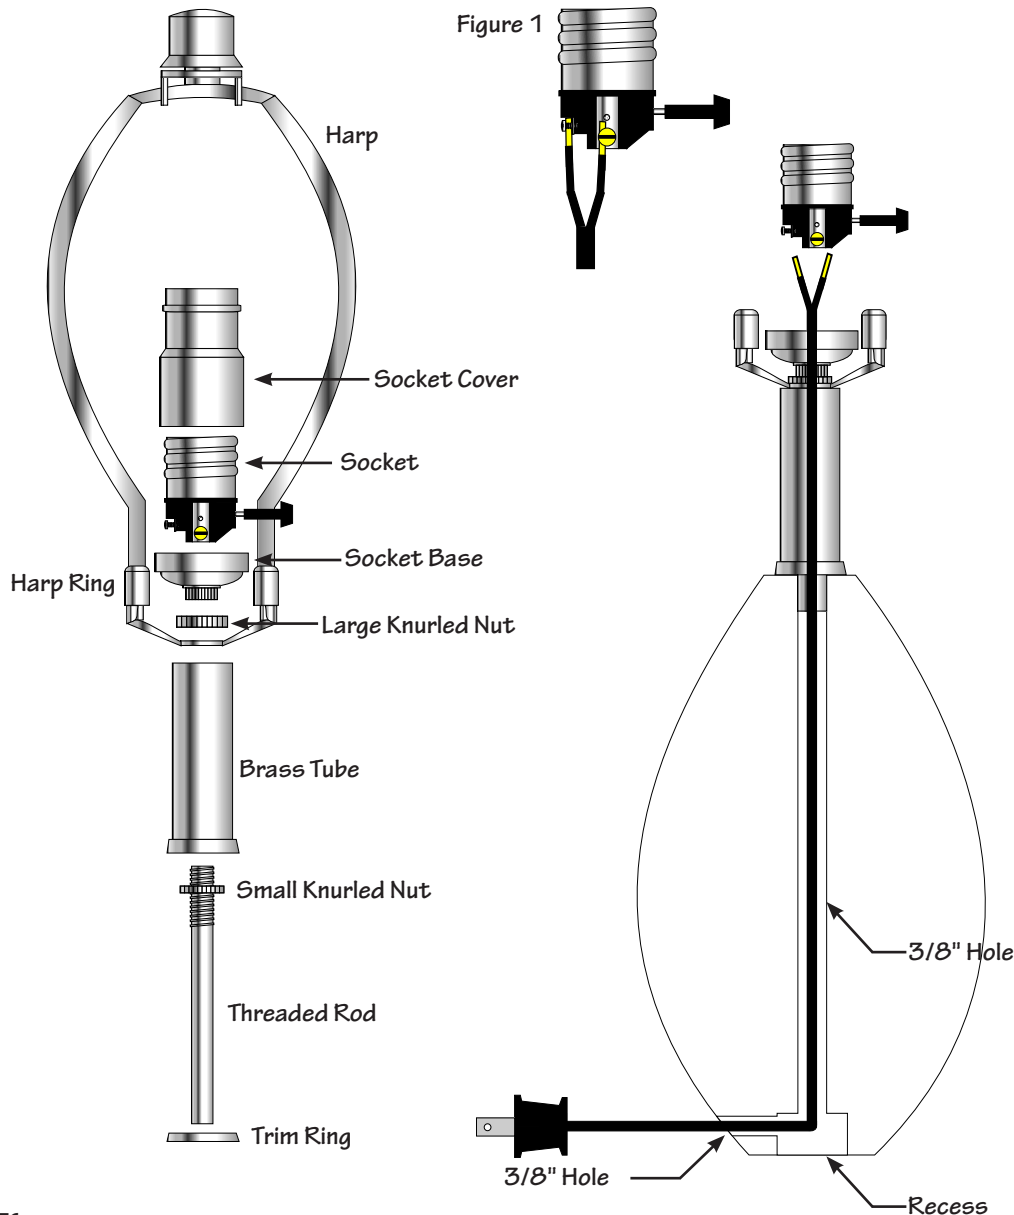

## Lamp Base Shapes

